

Mini DISP2 BUS

ALARMS AND TEXT DISPLAY User's manual

Release 1.0 - July 2007



DUEMMEGI 
HOME AND BUILDING AUTOMATION

Via Longhena 4 - 20139 MILANO
Tel. 02/57300377 - FAX
02/55213686
www.duemmegi.it

INDEX

1- INTRODUCTION.....	3
2- Mini DISP2 BUS: MAIN FEATURES.....	3
3- CONNECTIONS.....	4
3.1 - Description of the Mini DISP2 BUS terminals.....	4
4 - OUTLINE DIMENSIONS.....	5
5 - TECHNICAL DATA.....	5
6 - INPUT AND OUTPUT POINTS.....	6
7 – OPTIONS SETTING.....	7
7.1 - Display contrast.....	7
7.2 - Mini DISP2 BUS address.....	7
7.3 - Memory option.....	7
7.4 - Local/Remote option.....	7
7.5 – Buzzer option.....	7
7.6 - Cycle time.....	8
7.7 - Alarm outputs.....	8
8 - FUNCTIONAL DESCRIPTION.....	8
8.1 - Operating modes.....	8
8.2 - Relay operation in LOCAL mode.....	9
8.3 - LOCAL – MEM operation.....	9
8.4 - LOCAL – NOMEM operation.....	9
8.5 - REMOTE – MEM operation.....	10
8.6 - REMOTE – NOMEM operation	10
8.7 - RESET of alarms.....	10
8.8 - Bus failure warning (BUS FAILURE).....	10
9 - PUSHBUTTONS FUNCTION AND KEYBOARD LOCK.....	11
10 - PROGRAMMING.....	11
10.1- Manual programming by the panel pushbuttons.....	11
10.2- Programming by Personal Computer.....	12
11 - PROGRAMMING MCP IN Mini DISP2 BUS APPLICATIONS.....	13
11.1- Example for keyboard lock.....	14

1- INTRODUCTION

The display **DUEMMEGI Mini DISP2 BUS** is a device allowing to report, in a customized way, messages for controlling purpose in many applications, such as industrial and domestic plants. Thanks to its flexibility, the display **Mini DISP2 BUS** makes easy to understand any information related to the occurrence of alarms or events. These devices can be employed in several applications as in the following examples:

- | | |
|-------------------------|-----------------------|
| x Machinery | x Building automation |
| x Industrial processing | x Home automation |
| x Plants | x Alarm signaling |

Mini DISP2 BUS is offered as an option, in a different housing, of the previous version DISP2 BUS.


2- Mini DISP2 BUS: MAIN FEATURES

- | | |
|--|--|
| x LCD display 2 x 16 characters with back-lighting | x 2 operating mode: with memory (MEM) or without memory (NOMEM) |
| x LCD contrast may be adjusted by the button on the front panel | x Events are displayed in chronological order (up to 64); information about the total amount of pending alarms |
| x Message programming by front panel pushbuttons or by PC | x Cyclic displaying of more messages; the cycle time may be set by user in the range 1 to 10 seconds |
| x Messages and parameters stored into Mini DISP2 BUS memory may be read by a PC | x Internal buzzer for alarm acoustic signaling; the buzzer operation may be disabled |
| x Messages are recalled by the bus line DUEMMEGI CONTATTO | x 2 potential free contacts (internal relays) and buzzer (directly handled by DISP2 BUS in LOCAL mode ore via bus in REMOTE mode) for additional acoustic/visual signaling (siren and flasher) |
| x 255 messages made by 2 main lines and 2 auxiliary lines | x The status of the buttons on the front panel can be acquired via bus |
| x 1 base message made by 2 lines (stand-by message) | x ACK and RESET commands can be forced via bus |
| x 1 alarm pending message made by 2 lines | x Keyboard lock to avoid unwanted operations by unauthorized personnel |

The firmware of **Mini DISP2 BUS** device can be easily updated “on the field” by the user through a PC connected via RS232 communication port by the provided cable; this feature allows future developments of the product concerning new functions and possible special versions. For more details about this feature, contact **DUEMMEGI** commercial office.

3- CONNECTIONS


The Figure 1 shows the wiring diagram of *Mini DISP2 BUS*

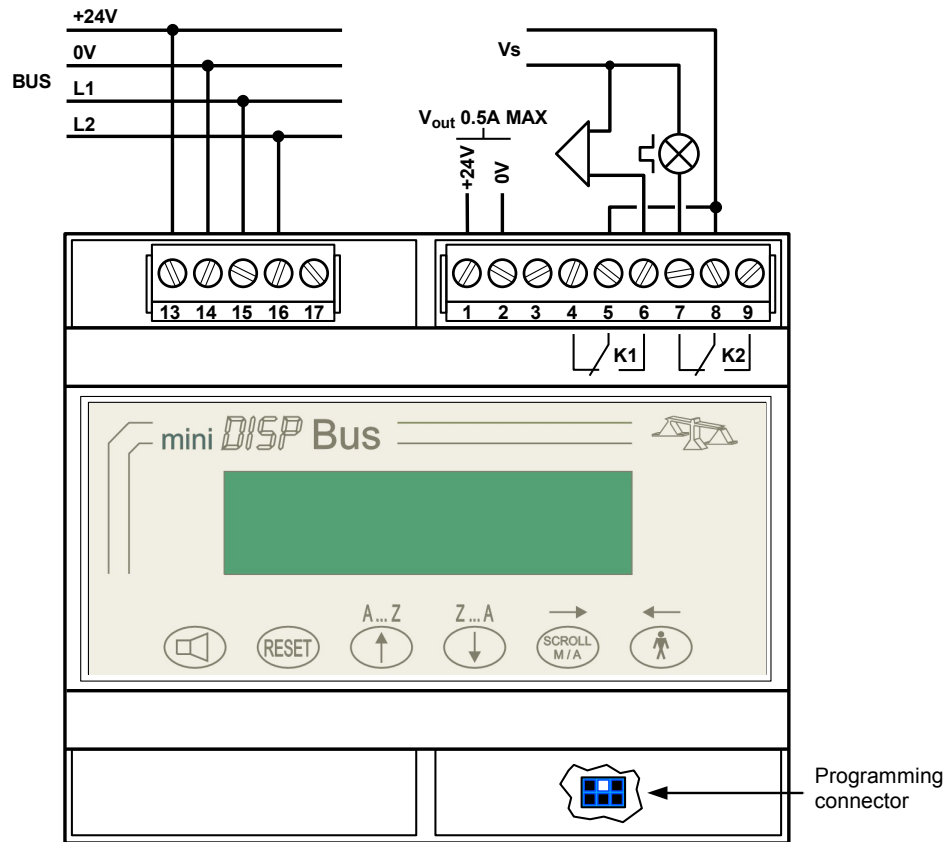

3.1 - Description of the Mini DISP2 BUS terminals

Terminal	Function
13	Positive power supply +24V $\pm 25\%$ SELV
14	Power supply common
15	L1 bus line of DUEMMEGI CONTATTO system
16	L2 bus line of DUEMMEGI CONTATTO system
17	Not connected
1-2	Power supply output (MAX 0.5A); terminal 1 is internally connected to terminal 13, terminal 2 is internally connected to terminal 14.
3	Not connected
4-5-6	Potential-free contact of the internal relay K1 for driving an alarm device (e.g.. siren)
7-8-9	Potential-free contact of the internal relay K2 for driving an alarm device (e.g. flasher)

4 - OUTLINE DIMENSIONS

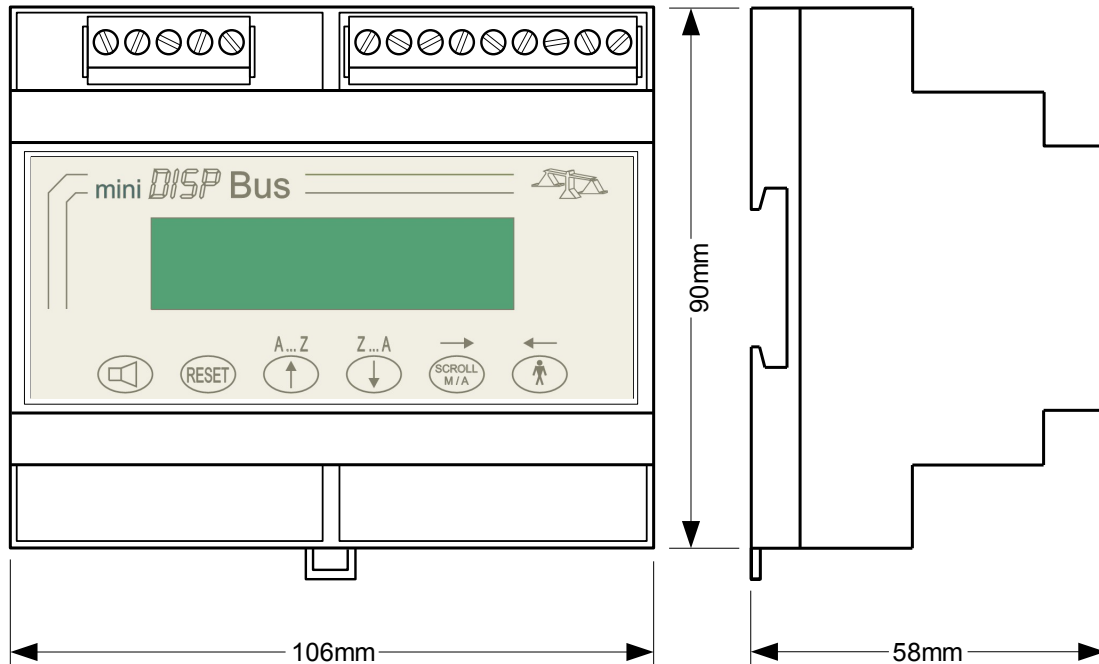







5 - TECHNICAL DATA

Power supply	24V \pm 25%
Current consumption	150mA MAX at 24V (with terminals 1-2 not connected)
Output voltage on terminals 1-2	Equal to that applied on terminals 13-14
Allowed current on terminals 1-2	0.5A MAX
Output contacts: Max switching voltage Max switching current Max operating power	60Vcc or 125Vca 1A 30W in cc / 60VA in ca
PC interface	RS232C full duplex opto-coupled
Display	LCD with back-lighting, contrast adjustable by keyboard on front panel
Characters (each line)	16
Lines	2
Characters height	3 mm
Number of message	255 (4 lines each one) + 1 (stand-by message, 2 lines) + 1 (pending messages, 2 lines)
Connections	By removable terminal blocks
Protection degree	IP20
Operating temperature	0 ÷ +50°C
Storage temperature	-10 ÷ +70°C



6 - INPUT AND OUTPUT POINTS

Mini DISP2 BUS behaves as an assemblage made by an input module and two output modules of **DUEMMEGI CONTATTO** family. Said "x" the base address chosen for *Mini DISP2 BUS*, the following *input points* and *output points* will be available:

Input points:

Indirizzo/punto	Funzione	Indirizzo/punto	Funzione
x.1	Status of button 	x.5	Status of button 
x.2	Status of button 	x.6	Status of button 
x.3	Status of button 	x.7	Status of relay K1 (siren)
x.4	Status of button 	x.8	Status of relay K2 (flasher)

Output points:

Indirizzo/punto	Funzione	Indirizzo/punto	Funzione
(x+1).1	Remote command button 	(x+1).5	Not used
(x+1).2	Remote command button 	(x+1).6	Command for internal buzzer
(x+1).3	Keyboard Lock/Unlock	(x+1).7	Command for relay K1 (siren)
(x+1).4	Not available	(x+1).8	Command for relay K2 (flasher)

The output address x is reserved to the binary code for the recalling of the messages stored in DISP2 BUS.






Notes:

1. Remote commands for **ACK** and **RESET** pushbuttons allow the implementation of remote acknowledge and reset functions; in other words, pushing the related button on the front panel or send through the bus a command forcing that function are equivalent actions
2. The commands, through the bus, of relays K1 and K2 and of buzzer are allowed only if *Mini DISP2 BUS* is set in **REMOTE** mode






7 – OPTIONS SETTING

7.1 - Display contrast

The contrast of the LCD display may be adjusted according to the user preferences.

To execute this adjustment, enter the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menus, using the buttons  and , until the **DISPLAY CONTRAST** parameter is reached. To modify the displayed parameter refer to paragraph 10.1. The setting of this parameter can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.






7.2 - Mini DISP2 BUS address

This is the bus base address assigned to **Mini DISP2 BUS**. To execute this setting, enter in the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menus, using the buttons  and , until the **BUS ADDRESS** parameter is reached. To modify the displayed parameter refer to paragraph 10.1. The setting of this parameter can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.

7.3 - Memory option

MEM (memory): each message, when recalled, remains in the displaying queue even if the binary code sent by bus changes; if several messages had recalled, these ones will be cyclically displayed with a period in the range 1 to 10 seconds (as set in CYCLE TIME option).

NOM (NOMEM = no memory): the displaying cycle shows the message related to the current binary code received by the bus.






To modify this option, enter in the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menus, using the buttons  and , until the **MEMORY OPTION** is reached. To modify the displayed option refer to paragraph 10.1.

The setting of this option can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.

7.4 - Local/Remote option

LOC (Local): two output relays are locally handled by **Mini DISP2 BUS**, in a way similar to the standard ISA-M alarm sequence.

REM (Remote): two output relays are exclusively driven by the bus; in other words, handling of the relays will be left to the **CONTATTO** system controller (MCP).

To modify this option, enter in the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menus, using the buttons  and , until the **SET LOCAL/REMOTE** option is reached. To modify the displayed option refer to paragraph 10.1.






The setting of this option can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.

7.5 – Buzzer option

BUZZER ON (Enable buzzer): this option enables the buzzer inside **Mini DISP2 BUS**. This is a global option, because it applies to all messages. In **LOCAL** mode the buzzer, if enabled, follows the status of the siren relay.

Note: the buzzer, as for the siren and flasher outputs, will be activated only for the messages that were configured for this function.

BUZZER OFF (Disable buzzer): this option disables the buzzer inside **Mini DISP2 BUS** (but siren will be however enabled).






To modify this option, enter in the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menus, using the buttons  and , until the **BUZZER**

OPTION is reached. To modify the displayed option refer to paragraph 10.1.

The setting of this option can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.

7.6 - Cycle time

This parameter set the time between the displaying of a message and another one. Allowed values are in the range 1 to 10 seconds, with 1 second step.

To modify this parameter, enter in the **Mini DISP2 BUS** setting menu pushing down at the same time the buttons  +  +  and move across the menu, using the buttons  and , until the **CYCLE TIME** option is reached. To modify the displayed parameter refer to paragraph 10.1.

The setting of this parameter can be done through the keyboard on **Mini DISP2 BUS** front panel or by the configuration program DISPTools running on the PC.

7.7 - Alarm outputs


Each message of **Mini DISP2 BUS** (in **LOCAL** mode) may be set to cause or less the activation of the 2 centralized alarm outputs (siren and flasher) and of the buzzer (if enabled). In other words, the difference between the two settings only concerns the handling of the two centralized alarm outputs (siren and flasher) and the buzzer (if enabled): a message having the alarm outputs enabled will cause the activation of siren, flasher and buzzer, while a message having the alarm outputs disabled will not cause any action on these devices.

The setting of the **ALARM OUTPUTS** for each message can be done **only** by the configuration program DISPTools running on the PC and it is valid for **LOCAL** mode **only**.

8 - FUNCTIONAL DESCRIPTION

Mini DISP2 BUS shows, at power-on and during 2 second about, some information:

- on the first line: the type (**DISP2 BUS**) and the firmware version (see example in the figure)
- on the second line: memory (**MEM**) or no memory (**NOM**) option, buzzer enabled (**ON**) or disabled (**OFF**), cycle time in seconds (e.g. T=2s)

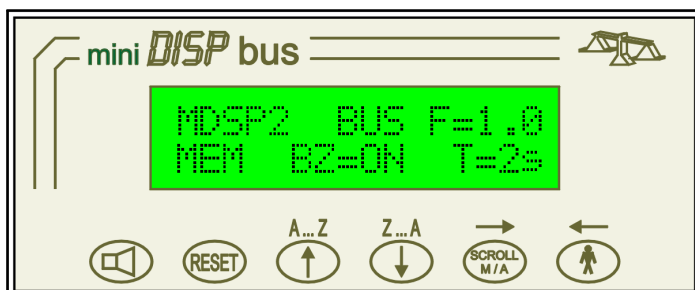

Then, if no events are present, the stand-by message will be displayed (line 1 and line 2 of the message zero).

The base address of Mini DISP2 BUS can be set by the buttons on the front panel or by a PC (see the paragraph describing the programming).

WARNING: **Mini DISP2 BUS** base address cannot be assigned by **CONTATTO** FXPRO programmer.

8.1 - Operating modes

Mini DISP2 BUS allows several operating modes:

MEM (memory): each message, when recalled, remains in the displaying queue even if the binary code sent by bus changes; if several messages had recalled, these ones will be cyclically displayed with a period in the range 1 to 10 seconds (as set in **CYCLE TIME** option)

NOMEM (no memory): displayed message is always that related to the last binary code received by bus

LOCAL: two output relays are locally handled by **Mini DISP2 BUS**, in a way similar to the standard **ISA-M** alarm sequence

REMOTE: two output relays are exclusively driven by the bus; in other words, handling of the relays will be left to the **CONTATTO** system controller (MCP)

Settings of operating mode may be done by front panel pushbuttons or by PC (see paragraph describing programming feature).




Note: in the following paragraphs it is implicit that the buzzer follows, in **LOCAL** mode and if enabled, the status of K1 relay (siren).

8.2 - Relay operation in LOCAL mode




In **LOCAL** mode and without alarm pending, K1 relay (siren) is de-energized and K2 relay (flasher) is energized; the siren must be then connected to the normally open contact and the flasher must be connected to the normally closed contact. This last connection ensures at least a visual warning when the power supply of **Mini DISP2 BUS** fails (intrinsic safety). The just described connections will be assumed in the following two paragraphs.

8.3 - LOCAL – MEM operation

When **Mini DISP2 BUS** is set as **LOCAL** and **MEM**, the operating sequence is the following:


- 1) when **Mini DISP2 BUS** receives, through the bus, a non-zero binary code, the siren and flasher will be activated; the related message will be shown on the display, alternated to the pending alarm message (message 000,3-000,4 – see paragraph describing the programming procedure)
- 2) if another non-zero binary code is received by the bus, the related message will be added to the queue and the display will cyclically show all recalled messages and the pending alarm message
- 3) pushing  button (**ACK**), the siren will be switched off, the flasher will remain activated and the display will show, during some seconds, the first recalled message (first out feature), then the cyclic displaying restarts
- 4) after having removed the alarm causes, **Mini DISP2 BUS** may be restored by a **RESET** sequence (pushing, in sequence, of pushbuttons  and ): the flasher will be switched off, the displaying queue will be reset and the stand-by message will be displayed (message 000,1-000,2, see paragraph describing the programming feature)

Notes:

- x if a new alarm occurs after **ACK**, the siren will restart
- x if some alarms are still active after a **RESET** sequence, the described sequence restarts as soon as a non-zero binary code will be received by the bus
- x if the 16th character of line 1 of a message is the symbol #, then the receiving of the related binary code from will not influence the internal relays
- x **Mini DISP2 BUS** stores, in chronological order, up to 64 events; any other event exceeding 64 will be ignored; the message shown after the alarm pending message is the first occurred, the second one is the second occurred and so on
- x pushing  button, it is possible to change from automatic (cyclic) to manual scrolling; in manual mode, the message related to the pending alarms can be displayed by pressing  (backward) and  (forward) buttons

8.4 - LOCAL – NOMEM operation

When **Mini DISP2 BUS** is set as **LOCAL** and **NOMEM**, the operating sequence is the following:

- 1) when **Mini DISP2 BUS** receives, through the bus, a non-zero binary code, the siren and flasher will be activated; the related message will be shown on the display
- 2) pushing  button (**ACK**), the siren will be switched off, the flasher will remain activated and the display will show the message recalled at the previous point
- 3) when a zero binary code will be received by the bus, the siren and flasher will be switched off and the stand-by message will be displayed

Notes:

- x if more alarms are pending, the bus controller (MCP) cyclically sends to **Mini DISP2 BUS** the related binary codes; this means that the siren restarts (if silenced before by the **ACK** pushbutton) at every binary code. This strange behavior is an implicit operation because **Mini DISP2 BUS** has not in the queue the alarm already acknowledged (remember that we are in **NOMEM** mode). It is better to use the **REMOTE - NOMEM** mode and handle the internal relays by the program downloaded in MCP controller
- x the **RESET** sequence in **LOCAL - NOMEM** mode has not any effect

8.5 - REMOTE – MEM operation

When *Mini DISP2 BUS* is set as **REMOTE** and **MEM**, the operating sequence is as before described for **LOCAL - MEM** mode, with the exception that the two internal relays will be always de-energized; the handling of these relays, when required, must be implemented in the program downloaded in the system controller (MCP).


8.6 - REMOTE – NOMEM operation




When *Mini DISP2 BUS* is set as **REMOTE** and **NOMEM**, the operating sequence is as before described for **LOCAL - NOMEM** mode, with the exception that the two internal relays will be always de-energized; the handling of these relays, when required, must be implemented in the program downloaded in the system controller (MCP).

8.7 - RESET of alarms

If the chosen operating mode is without storing (**NOMEM**), the **RESET** sequence has no relevance.

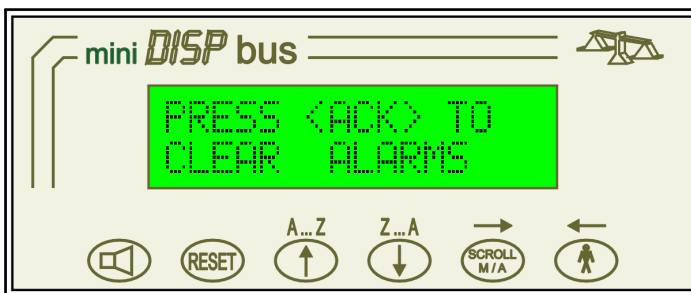
On the contrary (**MEM** mode), the **RESET** sequence allows to restore the situation; this means that all alarms in the queue will be removed. The **RESET** sequence is the following:



- x silence the siren by pushing  button
- x push  button; **Mini DISP2 BUS** will display the text shown at this left side
- x push  button to confirm the **RESET** of the message queue

If the confirmation does not occur in 3 seconds, the **RESET** request will be automatically rejected.



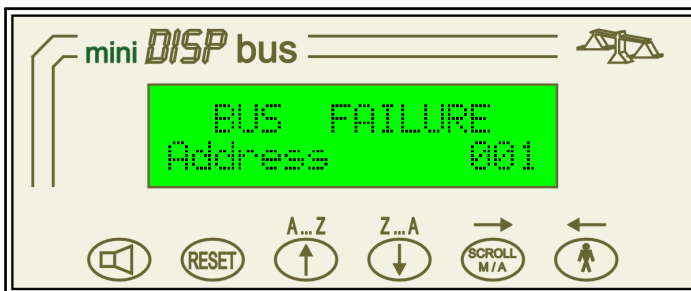


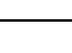


8.8 - Bus failure warning (BUS FAILURE)



When the signal on the L1 and L2 bus lines is not detected by **Mini DISP2 BUS** (e.g. when the MCP controller is disconnected, or when the bus is broken), **Mini DISP2 BUS** warns about this condition displaying the text shown at this left side. Note that in this condition the base address is displayed too.

9 - PUSHBUTTONS FUNCTION AND KEYBOARD LOCK

The 6 pushbuttons on the front panel, during normal operation, perform the following functions:

Key	Function
	ACK: acknowledge, siren silencing
	Request of queue reset; the confirmation must occur within 3 seconds by pressing the ACK button
	Show next message when the manual scrolling of messages is enabled
	Show previous message when the manual scrolling of messages is enabled
	Switch from the automatic to manual scrolling of messages and vice-versa. Mini DISP2 BUS returns to automatic scrolling at the activation of a new message
	Show the auxiliary lines of the current message (lines 3 e 4 of each message). The displaying of auxiliary lines, in automatic cyclic mode, remains until the cycle time T (set by the user) elapses. During the manual displaying mode, lines 3 and 4 remain on the display until the pressing of button  or 

The keyboard of **Mini DISP2 BUS** can be locked exclusively through the bus activating the point (x+1).3 (x is the base address). To unlock, deactivate the same point. To perform the locking feature, a proper section of program must be included into MCP controller (see example in paragraph 11.1 of this manual).

During the programming mode, these pushbuttons performs other functions; refer to the related paragraph for details.

10 - PROGRAMMING

10.1- Manual programming by the panel pushbuttons

The programming of messages and options may be performed by the front panel keyboard of **Mini DISP2 BUS**. To enter into the programming mode of **Mini DISP2 BUS**, press down at the same time the buttons



The options that can be modified are:






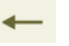
- LCD display contrast
- Base address
- MEM/NOMEM option
- LOCAL/REMOTE option
- BUZZER ON/OFF option
- Cycle time for messages scrolling
- Messages text (0 to 255)

The programming procedure has two operating modes:







1. Search of the option or message to be modified
2. Option or message edit

These modes can be easily identified because in the edit mode a blinking cursor is shown (the cursor is a small line under the character); the cursor is not displayed during searching mode. In edit mode, the cursor can be moved on any character to be modified.








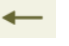
In the **searching mode** the pushbuttons perform the following functions:

Key	Function
	Next message or parameter. Hold down this button to quickly scroll forward the searching.
	Previous message or parameter. Hold down this button to quickly scroll backward the searching.
 or 	Enter the edit mode.
 + 	Quit programming.

In the **option edit mode** the pushbuttons perform the following functions:

Key	Function
	Increase the parameter or show next proposed option. Hold down this button to quickly scroll forward.
	Decrease the parameter or show previous proposed option. Hold down this button to quickly scroll backward.
 + 	Save the current parameter and go to searching mode.
 + 	Quit programming without saving.

In the **message edit mode** the pushbuttons perform the following functions:

Key	Function
	Next character. Hold down this button to quickly scroll forward.
	Previous character. Hold down this button to quickly scroll backward.
	Move cursor to right.
	Move cursor to left.
 + 	Save the current parameter and go to searching mode.
 + 	Quit programming without saving.

10.2- Programming by Personal Computer



Mini DISP2 BUS features a connector allowing the connection to a PC through the RS232 serial port (using the provided cable). This connector (blue colored) is located under the terminal cover on the bottom right side (see figure at this left side); to remove the cover, help yourself with a small screwdriver.

The operating parameters, options and messages of **Mini DISP2 BUS** can be programmed by the PC; in addition, the reverse operation can be also performed, so it is possible to read all parameters, options and message stored in the **Mini DISP2 BUS**.

The PC must be equipped with a program named **DISPTools** and distributed free of charge by **DUEMMEGI**. This program runs in Windows 98, 2000, XP. For detail on using **DISPTools** refer to the on line help of the program itself.

11 - PROGRAMMING MCP IN Mini DISP2 BUS APPLICATIONS

This paragraph describes, by an example, the implementation of an alarm sequence totally handled by MCP/MOD or MCP/Plus controller of **CONTATTO** system.

The **Mini DISP2 BUS** in the following example must be set as **NOMEM** and **REMOTE**; the base address is chosen as 003.

Description of the system to be implemented:

given 8 inputs (I1.1 ÷ I1.8), we want that at the activation of each input the following events occur:

- x The message related to the occurred event will be displayed
- x The event must be stored, then, even if the input returns to its non-active state, the alarm condition remains active
- x Siren and flasher output will be activated

We want to silence the siren pushing **ACK** button on **Mini DISP2 BUS** front panel; we want that this button does not influence the flasher output and the displaying of **Mini DISP2 BUS**. Moreover, we want that **RESET** button on **Mini DISP2 BUS** front panel restore the "system", this means to remove the pending alarm from memory, but only if the related input has returned to its non-active state, and, if no more alarms are pending, the flasher output must be switched off.

After each acknowledge, any new alarms (that means not still stored) must activate the siren again.

In addition, the **RESET** button must not have any effect if the siren was not silenced before by **ACK** button.

The program for **CONTATTO** MCP controller that implements the just described specification is the following:

```

////////////////////////////////////
// MCP PROGRAM FOR ALARM HANDLING WITH DISP2 BUS //
////////////////////////////////////
// ALARM MEMORY DEFINITION: EACH MEMORY CELL IS SET BY RELATED INPUT
// (FROM I1.1 TO I1.8) AND RESET BY RESET BUTTON ON DISP2 BUS (I3.2),
// BUT ONLY IF THE SIRENA (O4.7=V202) WAS SILENCED AND RELATED INPUT HAS
// RETURNED TO ITS NON-ACTIVE STATE
V1 = SI1.1 & (RV203 | I1.1)
V2 = SI1.2 & (RV203 | I1.2)
V3 = SI1.3 & (RV203 | I1.3)
V4 = SI1.4 & (RV203 | I1.4)
V5 = SI1.5 & (RV203 | I1.5)
V6 = SI1.6 & (RV203 | I1.6)
V7 = SI1.7 & (RV203 | I1.7)
V8 = SI1.8 & (RV203 | I1.8)

// SIREN OUTPUT (O4.7): EACH NE ALARM SWITCH ON THE SIRENA; THE SWITCH OFF OF
// THE SIREN OCCURS BY ACK BUTTON ON DISP2 BUS (I3.1)
V201 = TV1 | TV2 | TV3 | TV4 | \
      TV5 | TV6 | TV7 | TV8 | \
      RI3.1
V202 = SV201 & RI3.1 & R!V998
O4.7 = V202

// VIRTUAL POINT TO RESET THE ALARM MEMORY CELLS: V203 WILL BE ACTIVATED
// PUSHING RESET BUTTON (I3.2), BUT ONLY IF THE SIREN (O4.7=V202) IS OFF
V203 = !V202 & I3.2

```

```
// FLASHER OUTPUT (O4.8), DEFINED AS OR OF ALARM MEMORY CELLS; THE FLASHER  
// WILL BE ACTIVATED UNTIL ALL ALARMS WILL BE REMOVED AND THE SYSTEM WILL  
// BE RESET
```

```
V204 = V1 | V2 | V3 | V4 | \  
      V5 | V6 | V7 | V8  
O4.8 = V204
```

```
// BINARY OUTPUT BLOCK DEFINITION
```

```
BINARY 3 ( \  
    B001 = V1    \  
    B002 = V2    \  
    B003 = V3    \  
    B004 = V4    \  
    B005 = V5    \  
    B006 = V6    \  
    B007 = V7    \  
    B008 = V8    \  
)
```

This program may be easily modified to be adapted to the various real applications.

11.1- Example for keyboard lock

Supposing to have assigned the base address 3 to *Mini DISP2 BUS*, the simple following program allows to lock/unlock the keyboard every time the buttons **A...Z** + **Z...A** + **→** are pressed at the same time for more than 3 seconds.

```
V901 = I3.3 & I3.4 & I3.5  
V902 = TIMER(V901, 30, 0)  
O4.3 = TV902
```

The keyboard lock/unlock can be implemented in several modes thanks to the possibility offered by MCP programming.